



INSTALLATION PROCEDURES

Anti Slip Clips



Place



Strike



Done



No Hot Permits, Nuts, Bolts, Screws or Nails Needed

- STEP 1 - Choose your design according to recommendations on pages 2 and 3
- STEP 2 - Place the clips accordingly.
- STEP 3 - Knock into place with a rubber mallet.
- STEP 4 - Check to ensure clip is installed properly.
- NOTE: if you need to correct the design for any reason you can remove the clips with a screwdriver and re-install.

SAFETY DISCLAIMER

- PPE recommended for installation.



INSTALLATION PROCEDURES

Anti Slip Clips




Designs recommendations
Stairs

Internal steps dry, debris
free



1st row

Snow, Ice, Heavy dirt,
Heavy Oil, exterior, heavy
debris

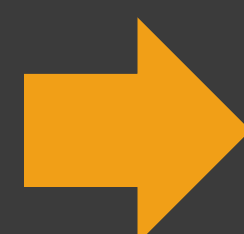

2 or 3 rows




INSTALLATION PROCEDURES

Anti Slip Clips



Designs recommendations
Platform, Access Walkway,
general grated surface

Internal dry, debris free

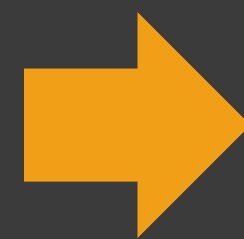

4 TO 6 CLIPS PER SQFT

Snow, Ice, Heavy dirt,
Heavy Oil, exterior, heavy
debris



8 TO 10 CLIPS PER SQFT

If you have special situation

- Write to our contact email
or call us!

Free consultancy!
send your photos/measurements!

✉ Sales@titansafety.net
www.titansafety.net

☎ 440-941-1410
888-868-2272

📍 1005 N. Commons Drive.
Aurora, Illinois, 60504. USA.